

ORBITER

Sirius Satellite Radio
1221 Avenue of the Americas
New York, NY 10020
(800) 869-5590
www.sirius.com

SIRIUS 

ORBITER

SR4000 Receiver User Guide

CONGRATULATIONS!

Your new Orbiter™ portable Plug-n-Play receiver lets you enjoy SIRIUS® Satellite Radio's digital entertainment anywhere you've installed the SH4000 Home Docking Station, SM4000 Mobile Docking Station, or the SB4000 Portable Boombox (each sold separately). Use this manual to familiarize yourself with all of Orbiter's features and capabilities.

For the latest information about this and other Orbiter products, visit www.sirius.com


Table of Contents

Box Contents	3	Menu Display Options	17
Safety Precautions	3	Sirius ID	17
Orbiter Controls and Features	6	Display Settings	18
Remote Control Functions	7	Confirm Tone Options	18
Activating your SIRIUS Subscription	8	FM Transmitter	19
Basic Operation	9	Channel Add or Skip	19
Changing Channels	9	Lock Options	20
Display Button	9	Audio Level	21
Search Modes (Category, Channel, Artist, Song)	10	Antenna Aiming	21
Direct Tuning	11	Memory Options	22
Setting Channel Presets	12	Time-Based Features	22
Recalling Channel Presets	12	Factory Default	25
Searching for a Channel Preset (P.TUNE Mode)	12	Troubleshooting	26
Preset Tune List Mode	13	Specifications	27
Memory (MEMO) and Song Seek (S-Seek) Functions	14	Optional Accessories	28
		Warranty	30


Box Contents

Unpack your Orbiter Receiver carefully and make sure that everything listed here is present:

 1 x Orbiter Receiver



1 x Remote Control (Batteries Not Included)

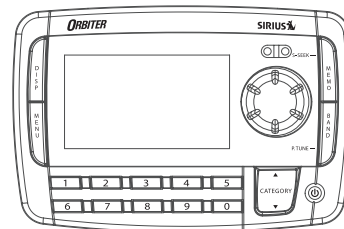

If anything is missing or damaged, or if your Orbiter Receiver fails to operate, notify your dealer immediately. It is recommended that you retain the original carton and packing materials in case you need to ship your Receiver in the future.

Safety Precautions

Warning

Take the following precautions to prevent traffic accidents and avoid personal injury:

- Installation must be performed according to this user guide. Sirius Satellite Radio is not responsible for issues arising from installations not performed according to the procedures in this manual.
- Do not install the unit where it may obstruct your view through the windshield or of your vehicle's indicator displays.
- Do not install the unit where it may hinder the function of safety devices such as an airbag. Doing so may prevent the airbag from functioning properly in the event of an accident.
- The installation and use suggestions contained in this manual are subject to any restrictions or limitations that may be imposed by applicable law—the purchaser should check applicable law for any restrictions or limitations before installing and/or operating this unit.
- Failure to follow these safety instructions and warnings may result in a serious accident.

Warning

Take the following precautions to prevent fire and avoid personal injury:

- To avoid short circuits, never put or leave any metallic objects (coins, tools, etc.) inside the unit.
- If the unit emits smoke or unusual odors, turn the power off immediately and consult your Orbiter retailer.
- Do not drop the unit or subject it to strong shocks.
- If the LCD display becomes damaged or broken, do not touch the liquid crystal fluid. The fluid can be dangerous to your health. If the liquid crystal fluid contacts your body or clothing, immediately wash it off with soap and water.

Caution

Take the following precautions to keep the unit in proper working order:

- Be sure the unit is connected to a 12V DC power supply with a negative ground connection.
- Do not open the unit.
- Do not install the unit where it will be exposed to high levels of humidity, moisture, or dust.

- When replacing a fuse, use only a new one with the proper rating. Using a fuse with the wrong rating may cause the unit to malfunction.
- To prevent a short circuit when replacing a fuse, first disconnect the wiring harness.

Note

If the unit doesn't seem to be working properly:

- Turn the unit's power off, wait 5 – 10 seconds, then turn the power on again.
- If the unit still malfunctions, turn the unit's power off, remove it from the cradle, wait 5 – 10 seconds, replace it in the cradle and turn the power back on. If the problem persists, consult your Orbiter retailer.

FCC Warning

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in this User Guide. The user could lose the authority to operate this equipment if an unauthorized change or modification made.

Note

This equipment has been tested and found to comply with Part 15 of the FCC Rules. These rules are designed to provide reasonable protection against harmful interference. This equipment may cause harmful interference to radio communications if it is not installed and used in accordance with these instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and SR4000 Receiver.
- Connect the equipment into an outlet on a circuit different from that to which the SR4000 Receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

Cleaning the Unit


If the unit becomes dirty, turn its power off and wipe it clean with a soft dry cloth. Do not use hard cloths or paint thinner, alcohol, or other volatile solvents to clean the unit. These may cause damage or remove indicator characters.

Warning


Do not operate the unit in a way that might divert your attention from driving safely. As a driver, you alone are responsible for safely operating your vehicle in accordance with traffic safety laws at all times.

Orbiter Receiver Controls and Features

- POWER Button** (⏻) : Turns Receiver On and Off; exits the Channel, Category, Song & Artist List modes.
- Rotary Knob & Select Button:** Navigates through display screens and makes selections of items highlighted on the display. Rotating clockwise (CW) increases or moves up in the menus. Rotating counterclockwise (CCW) decreases or moves down in the menus.
- CATEGORY Up/ Down Button:** Navigates through Category List Screen which displays Sirius Channel Categories.
- Display (DISP) Button:** Changes text size of artist names and song titles.
- Menu Button:** Used to access menu options to make setup and feature changes.
- Preset Number Buttons (0-9):** Sets and selects preset channels.
- Memory (MEMO) Button (S-Seek Function):** Saves and recalls artist names and song titles. You can store up to 20 artist/song title combinations.
- Band Button (P.Tune):** Pressing and releasing switches between preset banks A, B, and C, which hold 10 presets each. Pressing and holding enables "Preset Tune Mode", which allows for viewing and listening of stored presets with turn of Rotary Knob.
- Remote Control Receiver:** Receives signals from the included wireless remote control.

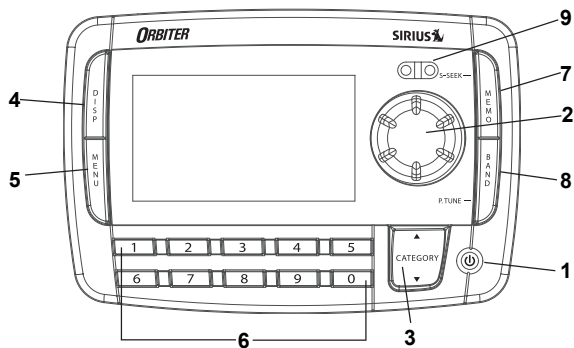

Remote Control Functions

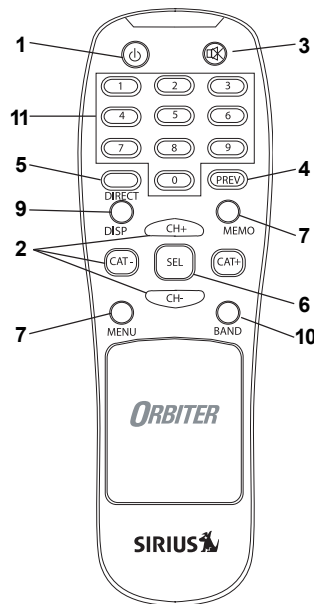

- POWER Button** (⏻) : Turns Receiver ON and OFF.
- CH+/ CH-/ CAT+/ CAT- Buttons:** Navigate through channels, categories, and display screens.
- Mute Button:** Mutes audio.
- PREVIOUS (PREV) Button:** Navigates back to previous channel.
- DIRECT Button:** Accesses channels directly by number.
- SELECT (SEL) Button:** Press to select items highlighted on the display; hold-down to jump to the previously-received Channel.
- MENU Button:** Enters and exits the Setup Mode.
- MEMORY (MEMO) Button:** Saves & recalls song & artist information; sets Parental Lock code number.
- DISPLAY Button:** Changes text size of artist names and song titles.
- BAND Button:** Switches between preset bands A, B, and C.
- Number Buttons (0-9):** Selects channels directly and by preset.

Installing Batteries in the Remote

- Remove the battery cover.
 - Install two "AAA" batteries.
 - Replace the battery cover.
- Note: Batteries are not included

Activating your SIRIUS Subscription

Before you can listen to the SR4000 Receiver, you must subscribe to SIRIUS Satellite Radio's service.

1. Make sure that the SR4000 Receiver is properly connected and that its antenna is oriented to receive the SIRIUS satellite signal (see *Docking Station Installation and/or Boombox User Manuals for details*).
2. Press the power button to turn the SR4000 Receiver ON. After displaying the SIRIUS logo, the Receiver will update all SIRIUS channels. The display will read "UPDATING STREAMS" on the top line and "X% Completed" (0%-20%-40%-60%-80%-100%) on the bottom line until the update completes.

NOTE: Don't push any buttons or perform any operations until updating has been completed.

Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other channels until you activate your SIRIUS subscription.

4. Press the MENU button to enter the "Menu Options" mode. The "Sirius ID" menu option will now be highlighted.
5. Push on the Rotary Knob to select "Sirius ID". This will display your unit's unique 12-digit SIRIUS ID Number. This SID number should also be available on the SR4000 Receiver packaging. Write the number down and have your credit card handy. A space has been provided at the end of this manual to write your SID.




6. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/>
Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at 1-888-539-SIRIUS (1-888-539-7474).

Basic Operation

After you have successfully activated your SIRIUS subscription, the Normal Operation (Default) screen will appear (*Below*): Use the Rotary Knob to select channels.

- The selected channel will automatically start playing. The name and artist of the currently playing song will scroll across the display.

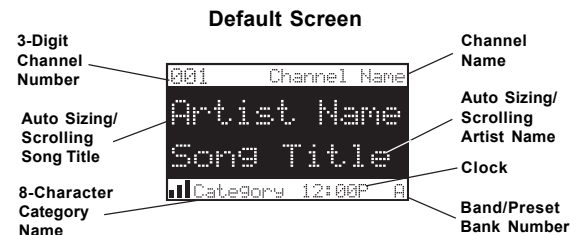


Changing Channels

Turning the Rotary Knob clockwise will increase, or move up to the next channel. Turning the Rotary Knob counterclockwise will decrease, or move down to the next channel.

Display Button

Pressing the DISP button from the Default display toggles between the artist name/song title and large character displayed text. In doing so, this will change the character size and cause the field to scroll. This feature is useful when viewing the display at a distance.

NOTE: The displayed text will scroll only if the length of the artist or title cannot be viewed in its entirety. Pressing and holding the Display button will enter the channel list mode.

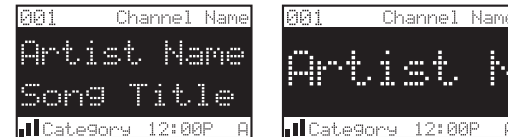

Pressing DISP will switch between these two display views


Search Modes (Category, Channel, Artist, Song Title)

The SR4000 Receiver has four ways to search for and select music: by category, by channel, by artist, and by song title.

Searching Categories

If you want to listen to a different entertainment category, push the CATEGORY button up or down to activate the Category Select screen (*top right*):

1. Use the CATEGORY button to scroll through music and entertainment categories.
 2. When the category (ex. Rock) you want is highlighted, use the Rotary Knob to search available channels within the category.
 - Pressing the DISP button while in the Category Search mode will change between Channel Name, Artist Name, and Song Title to be able to preview what is playing on other channels before selecting.
 3. When the channel you want is highlighted, press the Rotary Knob. The channel will change and the display will revert to the Default screen for the new channel.
- To exit this mode without changing to a new channel, press and hold the DISP button for 1-second.

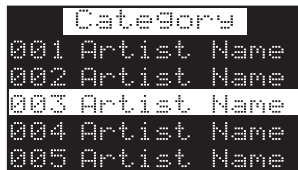


Searching Channels (Channel List Mode)


It is possible to search for a different channel while listening to your current channel. Be sure that the display shows the Default screen prior to the following steps:

1. Press and hold the DISP button for 2-seconds to activate the Channel List Mode (*top right*). The Channel List screen will appear, showing all available channels regardless of category:
 - Pressing the DISP button while in the Channel List Mode will change between Channel Name, Artist Name (*middle right*), and Song Title (*bottom right*). You can use this feature to search for a specific Artist or Song that may be playing at the time.
2. Turn the Rotary Knob up or down to find the channel you want.


3. Press and release the Rotary Knob to select the channel. To exit this mode without changing to a new channel, press and hold the DISP button for 1-second.

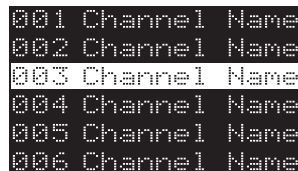

Press and Hold the DISP button to enter the Channel List Mode

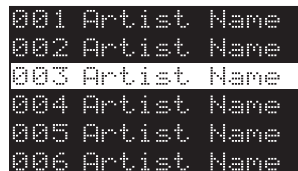

Press DISP again to show the Artist Name

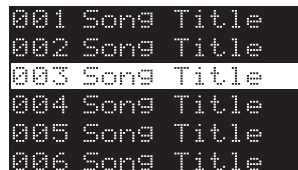

Press DISP again to show the Song Title

Press DISP again to go back to Channel List

Direct Tuning

Channels can also be directly accessed by pressing and releasing the Rotary Knob and using the 0-9 number keys to numerically enter the desired channel (*below*). Once the desired channel number has been entered, the channel will change and the display will revert to the Default screen for the new channel.

Note: The receiver will change immediately if three numbers are entered (ex. “0”, “0”, “7”), but if just one or two digits are entered, the unit will change to that channel 3-seconds after the last number was entered.



Setting Channel Presets

You can store up to 30 of your favorite channels as presets, for quick access. Presets are stored in 3 banks, A, B & C, each containing 10 channel presets.

1. Press the BAND button to activate the preset bank you want. The selected bank is shown in the lower right corner of the Default screen.
2. Select the channel you want to preset (see *Basic Operation* and *Changing Channels* on page 9).
3. Hold the numbered preset button you want to store the channel in for at least 2 seconds.
 - The selected preset number will flash and then remain lit on the display to show that it has been memorized.
 - If the preset button already has a channel stored in it, it will be replaced with the new channel.

Recalling Channel Presets

The 10 presets in the active bank (A, B or C) can be selected by pressing the “0” – “9” buttons.

1. Press the BAND button to activate the preset bank you want. The selected bank is shown in the lower right corner of the Default screen.
2. Press the desired preset button “0” – “9” to recall the preset. The channel will change and the display will revert to the Default screen for the new channel.

Searching for a Channel Preset (P.TUNE Mode)

It is possible to quickly search through all of your presets using the Rotary Knob.

1. Press and hold the BAND button to enter the Preset Tune Mode (P.TUNE).
2. The bottom right portion of the display will change to highlight the current preset (*bottom right*).
3. Turn the Rotary Knob in either direction to move up or down through your presets. The new channel will start to play as soon as you stop turning the Rotary Knob.
 - Only stored presets will be displayed, regardless of what bank they are stored in.
 - Presets will be grouped and displayed by preset bank and number (ex. A-1, A-2...B-1, B-2...C-1, C-2...) and rotate all the way around back to the beginning.



Default Display




P.TUNE Display


Preset Tune List Mode

The P.TUNE Mode can also be viewed as a list showing Channel Name, Artist Name, or Song Title just like in the Channel List Mode:


1. Press and hold the BAND button to enter the Preset Tune Mode (P.TUNE) (*bottom*).
2. Press the DISP button for 2-seconds which will bring up the Preset Tune List Mode displaying up to 6 preset channel names.
 - Pressing the DISP button while in this mode will change between Channel Name (*right top*), Artist Name (*right middle*), and Song Title list modes (*right bottom*)
 - The name field will scroll only if the length of the artist or song title cannot be viewed in its entirety.
3. Use the Rotary Knob to select the desired preset.
4. Push and release the Rotary Knob to select the preset. The channel will change and the display will revert to the P.TUNE Display.

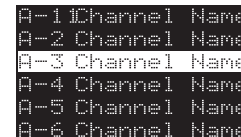

P.TUNE Channel Name List Display

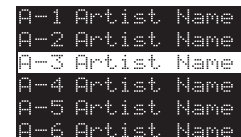

P.TUNE Artist Name List Display

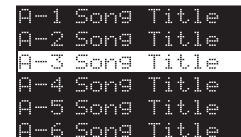


P.TUNE Song Title List Display

Memory (MEMO) and Song Seek (S-Seek) Functions:

This feature allows the user to capture and store the current Artist & Song title with a total of 20 listings (20 Artist/Song Title combinations). The unit also has the capability to search the current incoming Sirius signal and alert the user when a saved song is being played.

Storing Song Titles

1. While the Receiver is in the Default display mode, momentarily pressing and releasing the MEMO button stores the current program data information within the Receiver's memory. A memory "Stored" pop-up screen, followed by "X Used/Y Empty" will each appear for 1 second (below).

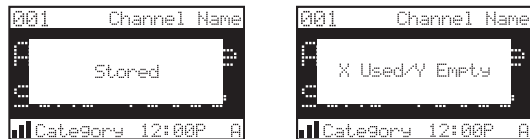

2. If the MEMO button is pressed to save a currently playing selection, and all of the memory spaces are


full, **S-Seek Full** (below, top left) will flash on the display for 1-second, followed by a pop-up screen presenting the **Replace-Cancel** (below, top right) options. This prompt allows you to make the following Replace/Cancel choices:

- By selecting **Replace**, the memory list will appear (below, bottom left), and you can use the Rotary Knob to select the information that you would like to overwrite with the new Artist/Song Title. After highlighting the selected title in the list, press the Rotary Knob to delete the stored Artist/Song Title, and replace it with the updated information. The display will show the "Stored" screen (below, bottom right).
- By selecting **Cancel**, the prompt screen would disappear and revert to the original screen.



Viewing Song Titles stored into Memory

1. Press and hold the MEMO button for 3 seconds to enter S-Seek Mode. The song titles stored memory information (one at a time) will be displayed on the LCD screen in page format.
2. Use the Rotary Knob to scroll through the 20-page listing and view the information. This function allows you to recall information regarding the Artist/ Song Title for your own personal review (below).

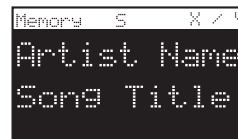

Deleting a Song Title Stored into Memory

1. Press and release the Rotary Knob while in S-Seek Mode results in a pop-up screen displaying two selectable options - "Delete" and "S-Seek" (below).



Activating the Song (S-Seek) Alert

1. Press and hold the MEMO button for 3 seconds to enter the S-Seek Mode.
2. Press and Release the Rotary Knob. A pop-up screen displaying two selectable options - “Delete” and “S-Seek” will appear (below left).
3. Use the Rotary Knob to highlight the “S-Seek” option.
4. Press and release the Rotary Knob and a S-Seek confirmation screen will appear. Select the “Yes” option using the Rotary Knob and press the Knob in to confirm (below right).



Each time the SR4000 Receiver is turned on, it automatically searches the incoming signal to determine if a match exists between the signal and the currently saved information stored in receiver memory. If one or more matches are found, a pop-up screen momentarily appears for 2-seconds and displays “S-Seek Alert”. An audible beep tone will be heard indicating that a match has been found. The

display then reverts to the S-Seek Alert screen which displays the current matches. You can now select the Artist/Song Title that you wish to listen to. No stored match alert is provided for the currently selected channel. To ensure that no duplicate entries are stored in memory, the Receiver will check the stored input data to ensure the information about to be stored is not already in memory.

- If one or more matches are found, a display list appears (below), and allows you to scroll through the list of songs using the Rotary Knob. Once a song is found, it can be selected by pressing the Rotary Knob, and the display will revert to either of the selected display modes.
- If a selection is not chosen within 10 seconds after the last action, the screen will revert to the previously selected display and tuning mode.


NOTE: Play of the current selection will continue until a new selection is made.



Menu Display Options

To enter the Menu Options page, press and release the MENU Button. The “Menu Options” list will appear on the display (below). Using the Rotary Knob, highlight the option you wish to adjust and press the Knob. The following options are available:


- | | |
|------------------|------------------------|
| Sirius ID | Audio Level |
| Display Settings | Antenna Aiming |
| FM Transmitter | Options Memory Options |
| Add or Skip | Time Based Features |
| Lock Options | Factory Default |

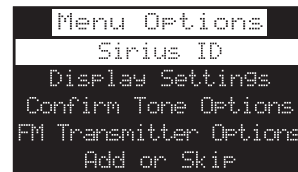

Note: If a button is not pressed within 10 seconds, the Receiver will exit the “Menu Options” function and reverts back to the Default screen display.

Sirius ID


Displays your 12 digit Sirius ID (SID) number. The SID is unique to every SR4000 Receiver and is required to activate your service. It is recommended that you write this number in the space provided on the last page of this user guide. No adjustments are allowed in this mode. To exit this option, press the Rotary Knob or Menu Button.

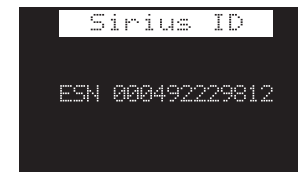

Display Settings

It is possible to adjust the Dimming, Contrast and Font type of the Receivers LCD display. While in the “**Menu Options**” list perform the following steps:

1. Use the Rotary Knob to highlight the “**Display Settings**” option. Press the Rotary Knob to select.
2. Select one of the following using the Rotary Knob:
 - a. **Contrast Control:** Adjusts the relationship between the background and the text on the LCD display. Use the Rotary Knob to adjust the contrast up or down. The bar graph at the bottom of the screen will move to indicate the change.

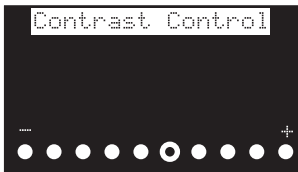

- b. **Dimming Control:** Used to adjust the overall brightness of the LCD display. Use the Rotary Knob to adjust the contrast up or down. The bar graph at the bottom of the screen will move to indicate the change.

- c. **Auto Dimmer:** Will automatically adjust the brightness of the LCD display depending on the ambient light. Use the Rotary knob to select “Auto Dimmer On” or “Auto Dimmer Off”.
 - d. **Font Type:** There are 4 different fonts (A, B, C and D) that can be selected for viewing Channel, Artist, or Song Title information. Use the Rotary Knob to scroll through and push to select the desired Font.

To exit the Display settings, simply push the MENU button.

Confirm Tone Options

The SR4000 Receiver will deliver an Audio “Tone” alert when the unit powers ON and OFF as well as when the S-Seek Alert is activated. The default is ON. To change the tone options, perform the following:

1. Use the Rotary Knob to highlight the “**Confirm Tone Options**”. Press the Rotary Knob to select.
2. Use the Rotary Knob to Select “**ON**” or “**OFF**”. Press the Knob to set the Tone Option.


To exit the Display settings, simply push the MENU button.

FM Transmitter Options

If using the optional SM4000 Mobile Docking Station and you would like to use the built-in FM Transmitter, you must first turn ON the function from the SR4000 Receiver:

1. Use the Rotary Knob to highlight the “**FM Transmitter Options**”. Press the Rotary Knob to select.
2. Use the Rotary Knob to Select “**FM On**” or “**FM Off**” (*below*). Press the Knob to set the Tone Option.

To exit the FM Transmitter Options, simply push the MENU button.

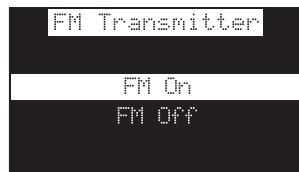


Channel Add or Skip

The SR4000 Receiver will allow you to skip selected channels when changing channels via the Rotary Knob. At any time you may select to add or skip specific channels. While in the “**Menu Options**” List mode, follow the steps below to Add or Skip a channel

1. Use the Rotary Knob to highlight the “**Add or Skip**”. Press the Rotary Knob to select.
2. Use the Rotary Knob to Select the channel you wish to skip or add. Pressing the Rotary Knob will add the text “Skip” next to the channel name to skip that channel. To add the channel, simply press the Rotary Knob and the text “Skip” will be removed.

Note: This feature only functions in normal channel search modes. You can always access any skipped channel using the Direct Tuning function.

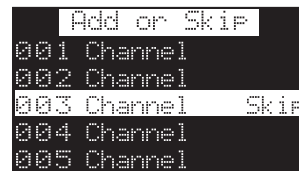


Lock Options

The SR4000 has the ability to lockout the use of any channel, or channels you do not want others to access without your permission. Like the Skip feature, the locked channel will not appear when the user changes channels with the Rotary Knob. When the user tries to access the locked channel using the Direct Tuning function, the “Enter Code” screen will be displayed and the channel will not be accessed until the proper code is entered.

While in the “Menu Options” List mode, follow the steps below to Lock a channel:

1. Use the Rotary Knob to highlight the “**Lock Options**”. Press the Rotary Knob to select.
2. Select “Lock/Unlock” from the Lock Options Menu (*below left*) and press the Rotary Knob to select.
3. Use the Rotary Knob to select the channel you wish to lock. Press the Knob in to select (*below right*).

Note: you can repeat steps 2 and 3 for as many channels you wish to Lock.

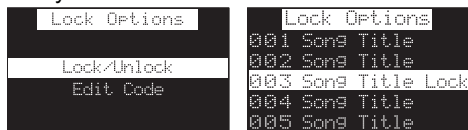

Changing the Lock/Unlock Code

The first time the Lock/Unlock function is accessed, the user must enter the default lock code. The default lock code is “0000”. This code can be maintained or changed. To change the default lock code, perform the following procedure while in the “Menu Options” List mode:

1. Use the Rotary Knob to highlight the “**Lock Options**”. Press the Rotary Knob to select.
2. Select “**Edit Code**” from the Lock Options Menu (*below left*) and press the Rotary Knob to select.
3. Enter the default code “**0000**”.
4. The “**New Code**” prompt will appear. Enter your new four digit code using the 0-9 number buttons (*below right*). You will then be prompted to confirm the new code by entering your code again.
5. The lock code is now changed.

Note: you can use this same method to Edit the code once it is changed from the default.



Audio Level

The audio output of the SR4000 can be adjusted to fine-tune the audio signal level for maximum performance. This is important when using either the optional SH4000 Home Docking Station or the optional SM4000 Mobile Docking Station. To change the Audio Level, perform the following procedure while in the “Menu Options” List mode:


1. Use the Rotary Knob to highlight the “**Audio Level Options**”. Press the Rotary Knob to select.
2. Use the Rotary Knob to adjust to the desired audio output level. A 10 segment horizontal bar graph is displayed with a “-” sign to the left and a “+” sign to the right. To select and exit this function, press the Rotary Knob. No button activity for 10 seconds will also exit this function.



Antenna Aiming

When using the optional SH4000 Home Docking Station or the SB4000 Boombox indoors, it is important to locate the antenna in an acceptable location (See the SB4000 or SH4000 installation guides for more information).

1. Use the Rotary Knob to highlight “**Antenna Aiming**”. Press the Rotary Knob to select.
 2. Two 10 segment horizontal bar graphs will be displayed (SAT and TER) with a “-” sign to the left and a “+” sign to the right. SAT indicated satellite signal and TER indicates terrestrial signal – if available.
 3. Adjust the antenna for maximum performance as per the SB4000 and SH4000 manuals.
- To exit this function, press the Rotary Knob or MENU button,

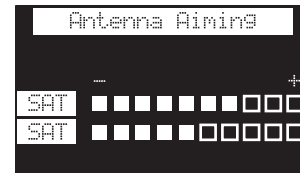

Memory Options

In this mode, the user can turn the Memory Search Function (S-Seek) ON or OFF. In addition, all 30 Preset Memory Locations can be cleared. To change the Memory Options, use the following procedure while in the “**Menu Options**” List mode:

1. Use the Rotary Knob to highlight the “**Memory Options**”. Press the Rotary Knob to select.
2. Select one of the following Memory Options:
 - a. **Automatic Memory Search function - On or Off:** Use the Rotary Knob to select between the 2 options by highlighting the desired selection. Then press the Rotary Knob to enter the option.
 - b. **Clear All Memory Locations:** Press and release the Rotary Knob; a prompt display screen appears confirming - **Clear All Memory** Select “**Yes**” or “**No**” and press the Rotary Knob.

To exit this function, press the Rotary Knob or MENU button. No button activity for 10 seconds will also exit this function.

Time-Based Features

This Menu Option allows for adjustments of the following items:

Clock	Auto Shutdown
Alarm Clock	Sleep Mode
Program Alert	

To change the Time-Based Features, use the following procedure while in the “**Menu Options**” List mode:

1. Use the Rotary Knob to highlight the “**Time-Based Features**”. Press the Rotary Knob to select.
2. Use the Rotary Knob to select one of the following Time-Based Features to adjust:
 - a. **Clock:** When entering this menu option, you can setup the clock shown on the default display, based on the format desired, and the time zone in which you reside. The clock data is provided via the Sirius Satellite data stream, and will update based on the received signal.
 - **Format:** The Clock Format option allows for either 12 Hour (Default), or 24 Hour display options. Use the Rotary Knob to select the desired format.

- **Time Zone:** Since the Clock adjusts the time automatically, it is important to specify your proper time zone. Use the Rotary Knob to select the proper time zone. The following is a list of time zones included:
 - (GMT-9:00) Alaska
 - (GMT-8:00) Pacific
 - (GMT-7:00) Mountain
 - (GMT-6:00) Central
 - (GMT-5:00) Eastern
 - (GMT-4:00) Atlantic (GMT-3:30) Newfoundland (Abbreviated as NewfndLnd)
- **Daylight Savings Time (DST) Observance:** Activate this function if your area is subject to DST; turn the Rotary Encoder to toggle between **DST Observed** (default) or **DST Not Observed**.
- **Alarm Clock:** When this menu option is highlighted and selected, you will be able to set the unit to turn on at a specific time. The last selected channel prior to shutdown will be present when the Alarm feature is activated. Alarm appears on the first line of the display followed by the alarm options:
 - **Set Alarm:** Use the Rotary Knob to select “Set Alarm” From the Alarm Clock Menu. Select either “Alarm Off” (Default) or “Alarm On” from the Menu and press the Rotary Knob to set alarm status.
 - **Alarm Time:** Use the Rotary Knob to select “Alarm Time” from the Alarm Clock Menu. Rotate the Rotary Knob to set the time you want the SR4000 Receiver to activate (Default is 12:00pm). Press the Rotary knob to store the Alarm Time.
 - **Program Alert:** When this menu option is highlighted and selected, you will be able to program the unit to switch to a selected channel at a specific time. Press the Rotary Knob to enter the Program Alert Menu, The following adjustment options are available:
 - **Program Time/Day:** Turning the Rotary Knob toggles between **Time** and **Day**. If **Time** is selected, use the Navigation Wheel increase (CW) or decrease (CCW) the set time in a circular motion on one line in the middle of the display from the default value (12:00pm). **AM** or **PM** will switch automatically when the AM or PM threshold has

Continued on Next Page

Program Alert (Continued)

- been exceeded. When the desired time is displayed, press the Rotary Knob. If **Day** is selected, the screen displays a default day of **Monday**, with selectable choices of **Monday, Tuesday, Wednesday, Thursday, Friday, Saturday** or **Sunday**. Use the Rotary Knob to increase (CW) or decrease (CCW) the desired day in a circular motion on one line in the middle of the display from the default value (Monday).
- **Stream** (Channel): Turn the Rotary Knob to scroll through a listing of all the Sirius channels. When the desired channel is highlighted, press the Rotary Knob.
 - **Program Alert On/Off** (Default is Off): Rotate the Rotary Knob to toggle between **Program Alert On** or **Program Alert Off**. When the desired alert status is highlighted, press the Rotary Knob.
 - d. **Auto Shutdown**: In this mode, you have the option of programming the unit to automatically shut off after a 1-hour period without any user intervention. After 59 minutes of inactivity, a beep tone sounds, and a display prompt appears on the screen, stating **“Cancel Auto Shutdown”**. To activate the Auto

Shutdown feature, use the Rotary Knob to select it from the Auto Shutdown Menu, press the Knob to enter the adjustment mode. Once in the Auto Shutdown Menu, use the Rotary knob to select either “Enable” or “Disable” the Auto Shutdown feature.

- **Cancel Auto Shutdown**: If you want to temporarily deactivate the Auto Shutdown feature once the beep tone sounds, press the Rotary Knob. The Auto Shutdown sequence will revert back to 1-hour.
- e. **Sleep Mode**: In this mode, you have the capability of programming the unit to shutdown after a selected period of time. The screen displays Sleep Mode on the top line, with optional time settings as follows:
 - Sleep Off
 - 15 Minutes
 - 30 Minutes
 - 45 Minutes
 - 60 Minutes

Use the Rotary Knob to select the desired Sleep Time. When the desired time is highlighted, press the Rotary Knob. The Receiver will now turn off after the selected time has expired.

Factory Default

This Menu option is designed to restore all the original factory settings. To activate the Factory Default perform the following procedure while in the **“Menu Options”** List mode:

1. Use the Rotary Knob to highlight the **“Factory Default”** option. Press the Rotary Knob to select. **“Restore Settings”** will pop up on the Receiver’s display (*right top*).
2. Use the Rotary Knob to select **“Yes”** to restore all the setting or select **“No”** to return to the **Menu Options** List Mode.

Note: If **“Yes”** is chosen, the unit reverts to the original factory settings for the following parameters:

- All Presets revert to empty
- Auto Dimming On
- Display Contrast to 50%
- Display Mode to Auto
- FM Modulator to On
- Audio Output Level to 50%
- Access to all skipped Channels (Locked channels remain locked)
- Memory Search On
- Memory Locations are erased
- 12 Hour Clock Format
- Eastern Time Zone
- Daylight Savings Time Observed



Troubleshooting

FAULT	PROBABLE CAUSE	REMEDY
Orbiter does not turn on	Blown Fuse, power cable not properly connected	Check fuse, check power cable
“ANTENNA NOT DETECTED” message	Satellite antenna not connected	Check satellite connection to receiver
	Antenna or cable is faulty	Contact system installer or vendor
Audio static or loss of clarity	FM modulator frequency contains static	Switch to another FM frequency
	Vehicle antenna not connected to radio	Check vehicle antenna cable
No signal on receiver display	Check for obstacles over or around antenna	Change location to eliminate nearby obstacles (bridge, etc.)
No Sound	1. Audio Cables not connected 2. Incorrect FM modulator frequency	1. Check cables at Receiver and radio 2. Select another FM modulator frequency.

Specifications

Audio Output	2.2V (Peak-to-Peak)
Total Harmonic Distortion (THD)	<0.3%
Signal-to-noise (S/N)	Greater than 75dB
Fuse Requirement	3A Slow Blow
Power Supply	10-16V, Negative Ground, DC
Receiver Dimensions	138mm(W) x 92mm(H) x 48mm(D)
.....	(5-3/8" W x 3-5/8" H x 1-7/8" D)
Receiver Weight	311g (11oz.)
Remote Control Dimensions	49mm(W) x 164mm(H) x 30mm(D)
.....	(1-7/8"W x 6-3/8"H x 1-1/8"D)
Remote Control Battery Requirements	2 x "AAA"

Note: Features and Specifications subject to change without notice.

Optional Accessories for your SR4000 Receiver

Add one or all of these accessories to maximize your Orbiter experience.

SB4000 Portable Boombox

The SB4000 Boombox is a portable docking station and audio system for the Orbiter SR4000 Receiver. With the built-in amplifier and speakers, the SB4000 delivers rich, powerful sound indoors or outdoors.

Includes the Following:

- Portable Boombox with built-in amplifier and speakers
- Auxiliary input for other audio devices
- Adjustable indoor/outdoor antenna with 20' of cable
- AC adapter

Item No. 120-2065



SH4000 Home Docking Station

The SH4000 is a compact docking cradle that positions the receiver for easy viewing and operation. Designed for quick and easy self-installation, it includes all necessary cabling to connect to your home audio system.

Includes the Following:

- Compact tabletop/desktop docking cradle
- Audio cable for connection to any stereo bookshelf system
- Adjustable indoor/outdoor antenna with 20' of cable
- AC Adapter

Item No. 120-2063



SM4000 Mobile Docking Station

The SM4000 is a compact docking cradle that positions the receiver for easy viewing and operation. Designed for quick and easy self-installation, it includes all necessary cabling to connect to your home audio system.

Includes the Following:

- Mobile docking cradle with built-in FM transmitter
- Quick-release windshield mount for easy installation
- Audio cable to connect to radio with auxiliary input
- Car power adapter
- Magnetic antenna with 21' of cable

Item No. 120-2062



12 MONTH LIMITED WARRANTY

Sirius Satellite Radio warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the location shown below under **WARRANTY RETURN**.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to tapes, compact discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 48 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

WARRANTY RETURN: To obtain repair or replacement within the terms of this Warranty, please return product to an authorized Orbiter retailer, RadioShack or call (800) 869-5590; proof of purchase and description of defect are required. Products to be returned to an approved warranty station must be shipped freight prepaid.

IMPORTANT INFORMATION

SIRIUS ID (SID): _____

PSN: _____

Orbiter Customer Service: 1-800-869-5590