

BELKIN®

www.belkin.com

Belkin Tech Support
US: 310-898-1100, ext. 2263
800-223-5546, ext. 2263
Europe: 00 800 223 55 460
Australia: 1800 235 546
New Zealand: 0800 235 546

Belkin Corporation
501 West Walnut Street
Los Angeles, CA 90220, USA
310-898-1100
310-898-1111 fax

Belkin Ltd.
Express Business Park, Shipton Way
Rushden, NN10 6GL, United Kingdom
+44 (0) 1933 35 2000
+44 (0) 1933 31 2000 fax

Belkin B.V.
Boeing Avenue 333
1119 PH Schiphol-Rijk, The Netherlands
+31 (0) 20 654 7300
+31 (0) 20 654 7349 fax

Belkin Ltd.
7 Bowen Crescent, West Gosford
NSW 2250, Australia
+61 (0) 2 4372 8600
+61 (0) 2 4372 8603 fax

© 2006 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. The XM logo and RodyXT are either trademarks or registered trademarks of XM Satellite Radio.

BELKIN®



**Mobility Kit for Xpress™
and RodyXT®
User Manual**

Introduction

Congratulations and thank you for purchasing the Mobility Kit for Xpress and RodyXT from Belkin. Now you can turn your Delphi RodyXT or Audiovox Xpress into a truly portable XM receiver and keep the music playing anytime on the go. Please be sure to read all the instructions in this User Manual so that you can get the most from your Belkin product.

What's in the box?

Your Mobility Kit for Xpress and RodyXT includes these components:

- Belkin TunePower for XM (Rechargeable Battery Pack) (1)
- XM Antenna Headphones (1)
- Belt Clip (2)
- XM 5V Home Power Adapter (5)
- TunePower Sleeve and Spacer for Delphi RodyXT (3)
- TunePower Sleeve and Spacer for Audiovox® Xpress (4)




1



2



3

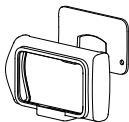

4



5

How to Attach the TunePower to your XM Receiver

There are two sleeve sizes and matching spacers included: Delphi RoadyXT and Audiovox Xpress. Select the appropriate sleeve and spacer for your XM Plug-n-Play receiver.

Attach the spacer for your XM receiver to the TunePower battery housing. (Fig. 1)

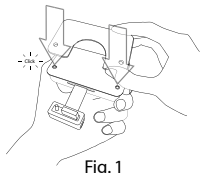


Fig. 1

Slide the battery housing through the opening in the sleeve as shown in the diagram. (Fig. 2) Make sure the flange around the edge of the battery pack securely snaps into the sleeve. (Fig. 3)

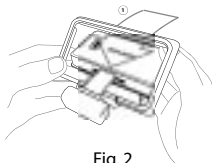


Fig. 2

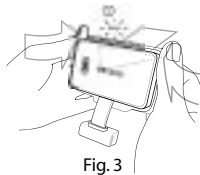


Fig. 3

How to Attach the TunePower to your XM Receiver

Attach the form-fitted sleeve to the XM Plug-n-Play receiver by sliding the receiver into the sleeve bottom first. Make sure that the dock connector on the bottom of the receiver is on the same side as the TunePower's cable and dock connector, and then slide the receiver into the TunePower sleeve. The receiver will be held tightly and will not fall out when it is inserted correctly. (Fig. 4)



Fig. 4

Connect the TunePower XM to the XM Plug-n-Play receiver by plugging the TunePower's dock connector into the opening in the TunePower sleeve. (Fig. 5)



Fig. 5

How to Attach the TunePower to your XM Receiver

Attach the belt clip. The belt clip can be attached to allow the Mobility Kit for Xpress and RodyXT to be carried on your belt with the display facing up or down. It can also be attached to an XM-radio-mounting solution, such as the Belkin TuneDok® for XM (sold separately). To remove the clip, firmly push against the tabs as shown in the diagram.

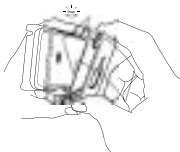


Fig. 6

Connect the XM Antenna Headphones to the port on the side of the TunePower XM. (Fig. 7) The XM Antenna Headphones are adjustable for a custom fit and feature a built-in volume control.


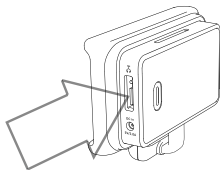



Fig. 7

How to Remove the Belkin TunePower XM from your XM Receiver

For Xpress Receivers:

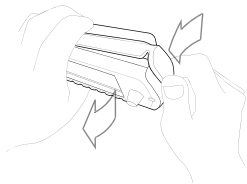

For RoadyXT Receivers:

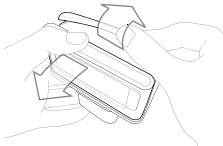

Operating the Belkin TunePower XM

The Belkin TunePower for Delphi RodyXT and Audiovox Xpress will provide four to five hours of playtime*

*Performance may vary based on the XM Plug-n-Play receiver with which it is used.

To check the remaining battery power level, press the button on the top end of the TunePower and let go. The button will light up to indicate the battery status:

Green: The battery is fully charged.

Amber: The battery is partially charged. As the battery charge gets lower, the color transitions from green to amber.

Red: Less than 10 minutes of charge remain. Time to recharge!

Charging the Belkin TunePower

To charge the Belkin TunePower, connect the small end of the included AC wall charger into the DC-power-in jack on the side of the TunePower. Connect the AC wall charger into any US wall power outlet.

The LED charge indicator will illuminate green when the Belkin TunePower is charging its batteries. This indicator will turn off when the battery has been charged to approximately 90 percent.

The TunePower will charge its batteries completely in approximately four hours. The Mobility Kit for Xpress and RodyXT is fully operational while the TunePower is charging.

Note: The Belkin TunePower XM will supply power to the XM Plug-n-Play receiver whenever its dock connector is connected. When not in use, it is recommended to disconnect the Belkin TunePower XM from the XM Plug-n-Play receiver or make sure that the XM Plug-n-Play receiver is turned off to conserve power.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or a radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.

Canada-Industry Canada (IC)

The wireless radio of this device complies with RSS 139 & RSS 210 Industry Canada. This Class B digital apparatus complies with Canadian ICES-003.

Belkin Corporation Limited 3-Year Product Warranty

What this warranty covers.

Belkin Corporation warrants to the original purchaser of this Belkin product that the product shall be free of defects in design, assembly, material, or workmanship.

What the period of coverage is.

Belkin Corporation warrants the Belkin product for three years.

What will we do to correct problems?

Product Warranty.

Belkin will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product).

What is not covered by this warranty?

All above warranties are null and void if the Belkin product is not provided to Belkin Corporation for inspection upon Belkin's request at the sole expense of the purchaser, or if Belkin Corporation determines that the Belkin product has been improperly installed, altered in any way, or tampered with. The Belkin Product Warranty does not protect against acts of God (other than lightning) such as flood, earthquake, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse, damage due to low voltage disturbances (i.e. brownouts or sags), non-authorized program, or system equipment modification or alteration.

How to get service.

To get service for your Belkin product you must take the following steps:

- 1.** Contact Belkin Corporation at 501 W. Walnut St., Compton CA 90220, Attn: Customer Service, or call (800)-223-5546, within 15 days of the Occurrence. Be prepared to provide the following information:
 - a.** The part number of the Belkin product.
 - b.** Where you purchased the product.
 - c.** When you purchased the product.
 - d.** Copy of original receipt.
- 2.** Your Belkin Customer Service Representative will then instruct you on how to forward your receipt and Belkin product and how to proceed with your claim.

Belkin Corporation Limited 3-Year Product Warranty

Belkin Corporation reserves the right to review the damaged Belkin product. All costs of shipping the Belkin product to Belkin Corporation for inspection shall be borne solely by the purchaser. If Belkin determines, in its sole discretion, that it is impractical to ship the damaged equipment to Belkin Corporation, Belkin may designate, in its sole discretion, an equipment repair facility to inspect and estimate the cost to repair such equipment. The cost, if any, of shipping the equipment to and from such repair facility and of such estimate shall be borne solely by the purchaser. Damaged equipment must remain available for inspection until the claim is finalized. Whenever claims are settled, Belkin Corporation reserves the right to be subrogated under any existing insurance policies the purchaser may have.

How state law relates to the warranty.

THIS WARRANTY CONTAINS THE SOLE WARRANTY OF BELKIN CORPORATION, THERE ARE NO OTHER WARRANTIES, EXPRESSED OR, EXCEPT AS REQUIRED BY LAW, IMPLIED, INCLUDING THE IMPLIED WARRANTY OR CONDITION OF QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND SUCH IMPLIED WARRANTIES, IF ANY, ARE LIMITED IN DURATION TO THE TERM OF THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL BELKIN CORPORATION BE LIABLE FOR INCIDENTAL, SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR MULTIPLE DAMAGES SUCH AS, BUT NOT LIMITED TO, LOST BUSINESS OR PROFITS ARISING OUT OF THE SALE OR USE OF ANY BELKIN PRODUCT, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which may vary from state to state. Some states do not allow the exclusion or limitation of incidental, consequential, or other damages, so the above limitations may not apply to you.